

FINAL ASSEMBLY

STEP #1 The Sonoma should be in your desired location.

STEP #2 Slide the Firebox back into the unit. The unit is correctly installed when the back of the rock is flush with the stucco finish

STEP #3 Have a qualified licensed professional make all the gas connections at this time. This should be done in accordance to all local and national codes.

STEP #4 Slide the Hearth Pad into place evenly.

STEP #5 Install the gas burner. Directions are included in the gas log box.

STEP #6 Install the logs and accessories as detailed in the provided instructions

 
Fire Stone Home Products
12400 Portland Avenue South
Burnsville, MN 55337
phone (952) 358-7438 | fax (952) 358-7414
www.firetonehp.com



SONOMA

OWNER'S MANUAL


INSTALLATION INSTRUCTIONS

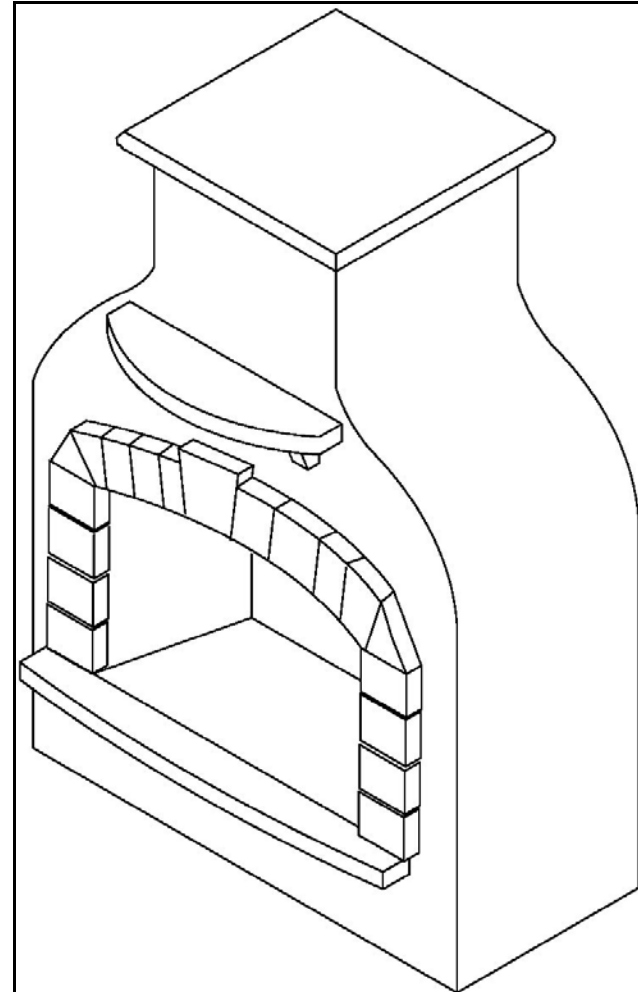

Contents


Contents.....	2
Required Tools.....	3
Unwrapping.....	4
Step One (Removal of Hearth Pad).....	5
Step Two (Removal Fire Box).....	6
Step Three (Mount Top Shelf).....	7
Final Assembly.....	8

 MOUNTING THE SHELF

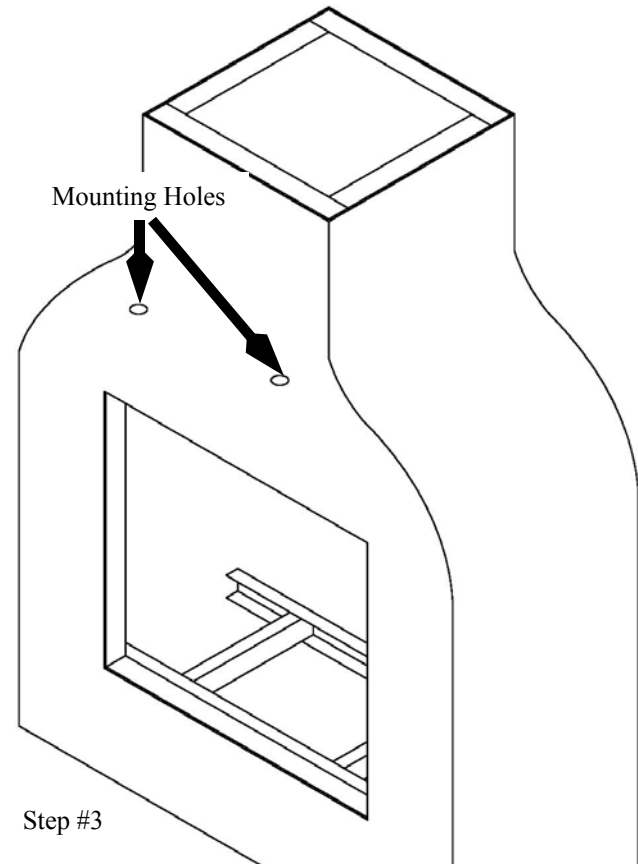

- Step #3
1. Remove the 3/8" x 1-1/2" bolts from the back of the shelf.
 2. One person holding the shelf in place and the other person inside the Sonoma thread the bolts back into the inserts. **DO NOT OVER TIGHTEN OR LIFT FROM THIS SHELF**

 REMOVAL OF FIREBOX

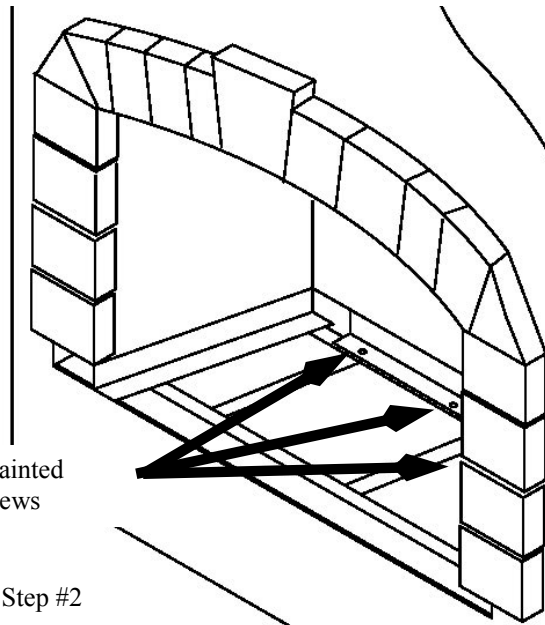

1. Using a power drill remove all of the brown painted screws to dislodge the firebox.
2. With a minimum of two people slide the firebox out completely and set aside.
3. This is a good time to move the Sonoma into it's final place.

WARNING

FIREBOX WEIGHT IS 150-175 LBS.

REQUIRED TOOLS

- ⇒ ***Razor Knife***
 - To cut and remove packaging.
- ⇒ ***Hammer or Pry Bar***
 - To remove 1 x 2 and staples.
- ⇒ ***Power Drill or Philips Screw Driver***
 - To remove packaging screws.
- ⇒ ***9/16" Deep Socket or Standard Socket with Extension***
 - To attach the top shelf
- ⇒ ***Leather Gloves***
 - To protect hands from rough and sharp products found on the Sonoma.
- ⇒ ***It is recommended that a minimum of two people assemble and install the Sonoma.***

 
UNWRAPPING PROCEDURE

WARNING

THE CAST TOP OF THE SONOMA IS NOT ATTACHED. DO NOT SLIDE OR MOVE THE UNIT UNTIL THIS HAS BEEN REMOVED.

1. Carefully dissect the outside wrapping to expose the unit. Maintain control of the blade the product behind could be damaged.
2. Remove the 1 x 2's so the unit is more easily removed from the pallet.
3. **Remove the cast top with a minimum of two people and set aside.**
4. Remove the top shelf and burner assembly from the firebox. This is more easily done one at a time.

REMOVAL OF THE HEARTH PAD

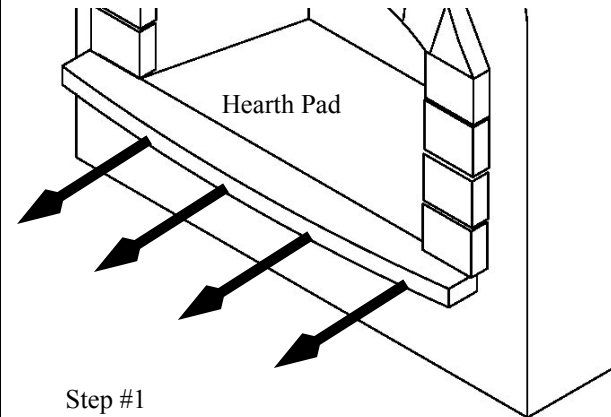

1. Slide the removable Hearth Pad out with care at an even rate. **DO NOT FORCE OR BIND THE PAD AGAINST THE FIREBOX.**