



Sonoma Fireplace

What is the warranty?

The product has a one year warranty for the original owner.

Does the unit come with optional glass doors or a covering for the front of the unit?

No, the unit does not come with glass doors, and at the present time, glass doors are not an option.

Does the fireplace come with the logs and burner?

The fireplace has an optional log set & grate that can be purchased to go with the CF-1224 burner. It comes standard with the CF-1224 burner and Diamond glass gems.

What material is used to make the fireplace?

The fireplace insert, mantel and top cap is made of GFRC (glass fiber reinforced concrete). The fireplace surround is made using a galvanized frame system with Hardibacker® board And exterior stucco.

Is the unit approved for use in screened porches, gazebos, and lanais?

The unit itself is not UL approved for this application, but there should not be any problem provided the following guidelines are followed:

- Minimum porch area: 96 square feet
- Minimum ceiling height: 92 inches
- Minimum of two walls must be screened
- Minimum top of screen height side walls: 6 ft. 8 in.
- Minimum screen area: 64 square feet

The CF-1224 burner is UL approved

How much does the fireplace weigh when totally assembled?

The fireplace weighs 625 pounds when totally assembled.

How many pieces do you have to assemble in order to put the fireplace together?

The fireplace consists of five pieces, with no one piece weighing more than 200 pounds. It is assembled by gluing the pieces together with silicone. Two people should be able to assemble the unit in one hour.

What is the BTU per hour input?

The CF-1224 will burn 60,000 BTU's per hour.



FREQUENTLY ASKED QUESTIONS



Think Outside...

How long will the fireplace burn on a 20 pound tank?

The fireplace will burn 6-8 hours on a 20 pound tank.

Can the unit be converted from NG to LP or LP to NG?

Yes, the CF-1224 burner comes with a NG orifice. It is set up for LP but can easily be converted to NG.

If burning LP gas, what is the minimum size LP tank the fireplace can be connected to in order for the unit to burn properly?

The minimum size tank is a 20 pound tank.

How does the unit vent?

The unit vents out the front of the fireplace.

What type of maintenance is required?

It is recommended that the GFRC pieces of the fireplace be sealed once a year using a concrete sealer that can be found at a local hardware store.

Can you burn solid fuels in the fireplace?

Burning anything other than NG or LP is prohibited.

What type of surface is needed for the fireplace base?

All you need is a level flat surface. It could be a wood deck, concrete, brick pavers, or other decking materials.

Can you paint the fireplace?

The stucco can be painted, but not the GFRC pieces.

Why won't the burner light?

Be sure the LP (liquid propane) or NG (natural gas) gas line is open so the gas can flow to the burner. Check to be sure the pilot is lit. If pilot is lit, gas line is open, turn the knob to on and the unit should light.

Why would the unit stop burning and the flame go out?

- The LP tank is empty or the gas is turned off.
- Although the log set comes with a wind resistant pilot light, the pilot could have blown out under very windy conditions. Turn the gas to off, wait five minutes and try to re-light. If you cannot relight the pilot light, you should call a gas technician for service.

Can you burn the fireplace inside your house?

No, the fireplace is strictly designed for outside.